

# Table of Contents

## Technical Manual, Autopilot Installation and Operation

	Navigation.....	v
	<b>Table of Contents.....</b>	<b>vii</b>
	Tables.....	ix
	Figures.....	x
<b>1</b>	<b>Introduction.....</b>	<b>1</b>
	Features .....	1
<b>2</b>	<b>Installation.....</b>	<b>3</b>
	Connectors .....	7
	Power .....	8
	Ground loops .....	9
	RC Receiver .....	9
	Servo Board.....	11
	GPS.....	11
	Mounting the GPS antenna .....	13
	AGL .....	13
	Serial .....	14
	Pitot tube .....	14
	Speed controller .....	14
<b>3</b>	<b>Communicating with your MicroPilot Autopilot .....</b>	<b>17</b>
	Using HyperTerminal.....	17
	Using HORIZON <sup>mp</sup> .....	19
	Installing HORIZON <sup>mp</sup> .....	19
	Configuring HORIZON <sup>mp</sup> .....	20
	Working with .vrs files.....	21
<b>4</b>	<b>Servo configurations.....</b>	<b>23</b>
	About Servo Configurations.....	23
	Making Servo Adjustments.....	25
<b>5</b>	<b>Operating your MicroPilot Autopilot.....</b>	<b>29</b>
	Preflight Checks .....	30
	Takeoff.....	30
	Manual takeoff .....	31
	Autonomous takeoff.....	31
	Fatal Errors.....	32
	Temperature Effects .....	37
	Datalog .....	37
<b>6</b>	<b>Post Installation Checks .....</b>	<b>39</b>

<b>7</b>	<b>Setting Parameters</b> .....	<b>43</b>
	Flight tab.....	43
	Servos tab.....	45
	Sensors tab.....	46
<b>8</b>	<b>PID Feedback Loops</b> .....	<b>47</b>
	About PIDs .....	48
	P Term .....	48
	I Term .....	48
	D Term.....	49
	About Feed Forward.....	52
	Setting Gains.....	52
	Feedback Loop Configuration .....	52
	Example: Level Flight .....	53
	Example: Climb.....	54
	Example: Descent.....	55
	Example: Pre-Takeoff.....	55
<b>9</b>	<b>MicroPilot Autopilot Setup</b> .....	<b>57</b>
	Adjusting Elevator, Ailerons and Rudder Gains .....	58
	Adjusting Pitch from Airspeed and Roll from Heading.....	59
	Adjusting Pitch from Altitude.....	60
	Adjusting Throttle from Altitude .....	60
	Adjusting Throttle from Airspeed .....	62
	Adjusting Rudder from Heading .....	62
	Adjusting Heading from Crosstrack.....	63
	Adjusting Pitch from Descent .....	63
	Using Gain Schedules .....	65
	Adjusting Gains for Autonomous Landing .....	66
<b>10</b>	<b>Commands</b> .....	<b>69</b>
	Data Types .....	69
	Unit Conversions .....	70
	Comments .....	71
	Flight Commands .....	71
	Calculation Commands .....	87
	Thread Commands.....	89
	In-flight Failure Patterns .....	100
	Compiler .....	102
	Run Time Errors .....	102
<b>11</b>	<b>MicroPilot Autopilot Fields</b> .....	<b>103</b>
	Sign Conventions .....	103
	Units .....	104
	Setup Fields.....	105
	PID Feedback Loops .....	122
	Runway Fields .....	130
	State Fields.....	130
	Table Lookup Functions .....	135

	Other Fields .....	136
	Servo & Flight Control Fields.....	139
	Command State.....	140
	Raw Sensors .....	141
	Feedback Loop State .....	143
	Origin Fields .....	144
<b>12</b>	<b>Setup Program.....</b>	<b>147</b>
<b>13</b>	<b>Datalog .....</b>	<b>149</b>
	Telemetry.....	154
<b>14</b>	<b>Loading New Code .....</b>	<b>157</b>
<b>15</b>	<b>Problem Solving .....</b>	<b>159</b>
	Initialisation.....	159
	Takeoff.....	162
	Flight.....	163
	Circuit and Landing.....	164
	Radio Reception .....	164
	Other Problems .....	165
<b>16</b>	<b>RMA's .....</b>	<b>167</b>
	Warranty.....	167
	RMA's.....	167
	Support.....	167

## Tables

Table 2.1	2028 <sup>g</sup> Component Dimensions and Weights.....	3
Table 2.2	2128g Component Dimensions and Weights.....	4
Table 2.3	MP2028g connectors .....	7
Table 2.4	MP2128g connectors .....	7
Table 2.5	Power connector.....	8
Table 2.6	RC Receiver Connector .....	11
Table 2.7	AGL Connections .....	14
Table 2.8	COM Connectors.....	14
Table 3.1	MicroPilot Autopilot Reports .....	18
Table 3.2	MicroPilot Autopilot Commands .....	18
Table 4.1	Servo Assignments .....	24
Table 4.2	Servo Fields.....	25
Table 4.3	Channel 5 Pulse Width Range .....	27
Table 5.1	Fatal Errors.....	33
Table 8.1	Feedback Loops.....	47
Table 8.2	Example $K_p = 0.6$ .....	50
Table 8.3	Example $K_p = 0.4$ .....	50
Table 8.4	Example $K_i = 0.1$ .....	51
Table 10.1	Data Types .....	68
Table 10.2	Flare Types.....	73
Table 10.3	Initiating a takeoff .....	79
Table 10.4	Control Parameters .....	82
Table 10.5	In-flight Failures.....	94

Table 11.1 Field Categories .....	97
Table 11.2 Sign Conventions .....	97
Table 11.3 Units .....	98
Table 11.4 Setup Fields.....	99
Table 11.5 Gain Scheduling .....	116
Table 11.6 PID Fields .....	117
Table 11.7 Pre-Defined PID Records.....	120
Table 11.8 Runway Fields.....	123
Table 11.9 MicroPilot Autopilot State Fields.....	123
Table 11.10 Lookup Functions .....	128
Table 11.11 Other Fields.....	128
Table 11.12 Servo and Flight Control.....	131
Table 11.13 Command State Fields.....	132
Table 11.14 Raw Sensor.....	134
Table 11.15 Feedback Loop State .....	135
Table 11.16 Origin Fields .....	136
Table 13.1 Datalog Fields.....	141
Table 13.2 GPS Status.....	144
Table 13.3 Changed Status Field.....	145
Table 13.4 Current Command.....	145
Table 13.5 Standard Telemetry.....	146
Table 13.6 Telemetry Status .....	147

## **Figures**

Figure 1.1 MicroPilot Autopilot block diagram.....	5
Figure 2.1 MP2028g connectors .....	5
Figure 2.2 MP2128g connectors .....	5
Figure 2.3 MP2028g Connector Locations.....	5
Figure 2.4 MP2128g Connector Locations.....	5
Figure 2.5 MP2028g Current draw .....	5
Figure 2.6 MP2128g Current draw .....	5
Figure 2.7 Ground loop from the servo board .....	5
Figure 2.8 Servo Board .....	5
Figure 2.9 MicroPilot Autopilot Serial Cable.....	5
Figure 8.1 Level Flight.....	5
Figure 8.2 Climb .....	5
Figure 8.3 Descent .....	5
Figure 8.4 Pre-Takeoff.....	5
Figure 10.1 Circuit .....	5