


Installing and using analog to digital converters

Required equipment and parts	2
Installing the ADC.....	2
Working with data.....	8
Examples.....	18
Index	29

The MicroPilot autopilot can support two external analog to digital converters (ADC) modules. Using ADCs, you can display data from external sensors on the HORIZON^{mp} ground control software.

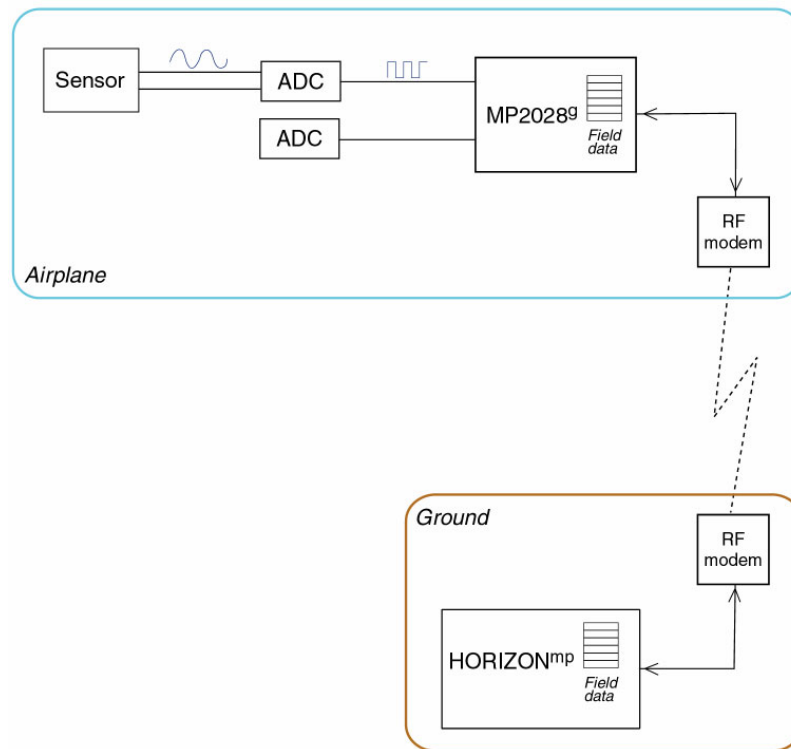

Each ADC module has 8 channels. Each channel can be configured with a different voltage range in either bipolar or unipolar mode.

Data from sensors is transmitted to HORIZON^{mp} and can be [displayed](#) in HORIZON^{mp} or [logged](#) in a text file.